

Capaciteitstabel vuilvrees tot 250 bar

		Druk / liters per minuut								
maat	lengte	20 bar	25 bar	30 bar	35 bar	40 bar	50 bar	60 bar	70 bar	
30	1.18mm	3.06	3.40	3.70	4.00	4.33	4.80	5.30	5.70	
35	1.30mm	3.50				4.95		6.06		
40	1.35mm	4.10	4.60	5.00	5.40	5.80	6.40	7.10	7.60	
45	1.40mm	4.62	5.10	5.60	6.10	6.53	7.30	8.00	8.60	
50	1.55mm	5.16	5.70	6.20	6.70	7.30	8.10	8.94	9.50	
55	1.60mm	5.62	6.30	6.90	7.40	7.95	8.90	9.73	10.50	
60	1.72mm	6.16	6.80	7.50	8.10	8.71	9.70	10.67	11.40	
65	1.75mm	6.64	7.40	8.10	8.80	9.39	10.50	11.50	12.40	
70	1.80mm	7.12	8.00	8.70	9.40	10.07	11.30	12.33	13.30	
75	1.90mm	7.60	8.50	9.40	10.10	10.75	12.10	13.16	14.30	
80	2.05mm	8.12	9.10	10.00	10.80	11.48	12.90	14.06	15.30	

maat	lengte	80 bar	100 bar	120 bar	150 bar	160 bar	180 bar	200 bar	225 bar	250 bar
30	1.18mm	6.12	6.84	7.50	8.38	8.65	9.18	9.65	10.20	10.60
35	1.30mm	7.00	7.83	8.57	9.59	9.90	10.50	11.00	11.70	12.30
40	1.35mm	8.20	9.17	10.04	11.23	11.60	12.30	12.90	14.80	15.20
45	1.40mm	9.24	10.33	11.32	12.65	13.07	13.86	14.50	15.00	16.30
50	1.55mm	10.32	11.54	12.64	14.13	14.59	15.48	16.10	16.90	17.70
55	1.60mm	11.24	12.57	13.77	15.39	15.90	16.86	17.70	18.60	19.90
60	1.72mm	12.32	13.77	15.09	16.87	17.42	18.48	19.30	20.40	21.70
65	1.75mm	13.28	14.85	16.26	18.18	18.78	19.92	21.00	22.00	23.40
70	1.80mm	14.24	15.92	17.44	19.50	20.14	21.36	23.00	23.70	25.30
75	1.90mm	15.20	16.99	18.62	20.81	21.50	22.80	24.00	25.30	26.70
80	2.05mm	16.24	18.16	19.89	22.24	22.97	24.36	26.00	27.00	28.80

Zoek in de kolomkoppen de capaciteit van uw machine, uitgedrukt in BAR.

Volg deze kolom naar beneden, kies het juiste aantal liters p. minuut dat uw machine produceert. (Aantal liters naar beneden afronden)

Dan staat links de juiste maat van uw Vuilvrees